



MICRON NITEWATCH NIGHT ARMING STATION

Feature Summary

- Selectable night zone arming
- One key arming and disarming
- One key panic function
- Increase and decrease key illumination

Nitewatch Operation

When the “ARM” key is pressed the green “Safe” light remains illuminated if all night zones are secure. If the red “Unsafe” light illuminates then one or more night zones is violated and should be secured prior to arming the system.

To Nitearm, press the “ARM” key. An audible acknowledgement will be heard. All lights turn on and a pre-programmed delay period allows night zones to be vacated. At the end of the delay period the system is armed and a second audible acknowledgement will be heard. All lights illuminate for 20 seconds, then dim to half illumination.

To generate a panic alarm condition, press the “EMERGENCY” button with two fingers to ensure both sides are depressed. The system will go into full alarm and can only be disarmed at the main system keypad using a valid four-digit arm/disarm code.

To decrease the back lighting of Nitewatch’s keys, press the left side of the emergency key. After a two-second delay the lights begin to dim.

To increase the back lighting of Nitewatch’s keys, press the right side of the emergency key.